NOTICE P300

1.The battery can reach its best performance after two to three times' throughly charge and discharge.
2.The battery should be charged for 8 to 10 hours at the first three time and then 4 hours'charging can be full, which make the batter reach its highest performance.
3.PLEASE backup your information before upgrading or formating.
4.DON'T dissemble the device.
5.AVOID fiercely collision.
6.AVOID leaving your device in high temperature, high humidity, dusty air-environment, magnetic field and explosion in the sunlight.
7.AVOID washing the device with chemical solution.
8.AVOID leaving the device beside liquid.
9.PLEASE choose proper volume, avoiding hearing loss.
10.DON'T change anything of the device.
11.PLEASE use the specified battery, adaptor and accessories. Other accessaries go against the warranty regulations and are dangerous.
12.PLEASE settle the device and accessories according the the native environment regulations.
13.PLEASE contact the native distributors and service center when the device has problems.
14. JXD will not inform its customers for any modification of software of product introduction in advance, and JXD's interpretation shall prevail in the precondition of obeying the local laws.

JXD

User Manual

P300

Thank you for purchasing JXD MID product!
For better enjoying it, we highly recommend you to read the following information before starting to use it. The version of this User's Manual is Ver1.0.

MENU P300

I.SPECIFICATIONS
II.BUTTON FUNCTIONS INTRODUCTIONS
III.GUIDANCE
1.Start the Device
2.File Transfer
3.Functions
(1). WiFi (2). 3G (3).Bluetooth
(4). Music (5). Video (6). Gallery
(7). Camera (8). Light Sensor (9). Recording
(10). G-Sensor (11). Application Download and Use

VI.CHARGING STEPS
1. Charge with MIC-USB
V.REBOOT
PROBLEM SHOOTINGS

SPECIFICATIONS P300

I. SPECIFICATIONS
- MODEL: P300
- FLASH: 4GB
- DDR: 512MB
- USB: micro USB
- SCREEN: 7.0 inch; Resolution: 1024×600
- BATTERY: Rechargable Li-ion Battery 4000mA/h
- SIZE: 200.3mm(L)*151.45mm(W)*9.4mm(H)

II.BUTTON FUNCTION INTRODUCTIONS:
Back: Back to the previous page
POWER: Wake up the device and long press it to power off the device
Volume+/-: Adjust the volume

GUIDANCE P300

1. Start the device
Long press the POWER button to power on and enter into the main interface.

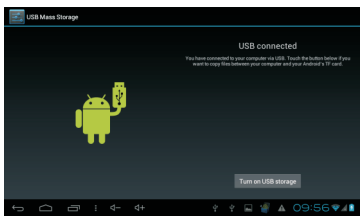

2.File Transfer
Connect the device to the PC with the USB Cable(Turn on USB Storage), copy the needed music/video/file in your PC to your MID disk.

GUIDANCE P300

3. Functions
(1). WiFi
In the "Settings", turn on WiFi and click Scaning to choose the availble networks,and then put in the right code to connect to the WiFi.

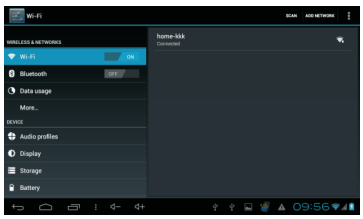

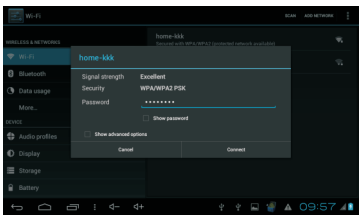

GUIDANCE P300

(2). 3G Networks and Phone Call
Insert 3G(WCDMA) or GSM card, then enter into Settings menu, choose Mobile Networks(default open) until signal icon appeared in the right bottom, it is connected successfully. Then you can use the mobile networks and make phone calls.(Turn off the WiFi before connecting 3G.)

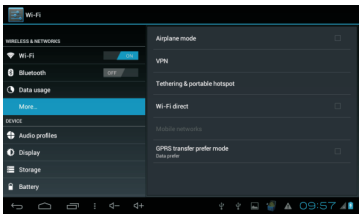

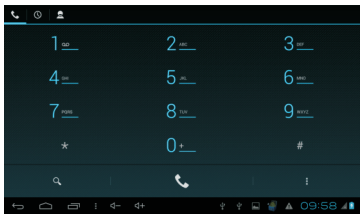

GUIDANCE P300

(3). Bluetooth
In the Settings, turn on Bluetooth, then automatically scanning bluetooth devices and after aired, you can transfer/accept files.

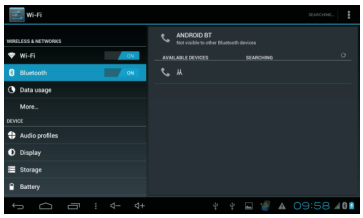

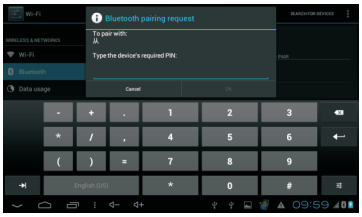

(4). Music
Click MUSIC to enter into music player, you can download the different style of music players from the Internet. The device supports MP3,WAV. AAC.OGG format.
(5). Video
Click Video to play videos, you can download different styles of video players from the Internet.The device supports 3GP, WEBM, MOV, and MP4 format.
(6). Gallery
Click Galleryto browse pictures and photos and set the pleased picture as the wallpaper.
(7). Camera 30W&200W
Click Camera to take photos and shootings. Insert TF card and you can save the pictures and videos in the TF card.
(8). Recording
Click Recording to record.
(9). G-Sensor
In the Display of the Settings, there is Auto-rotate screen. Click it and you can turn on or turn off G-SENSOR.

(10).Application Download and Use
Method 1: Backup APK files from PC and install them in the device.
(1). Backup theAPK files from the PC to your device or TF card;
(2). In the Settings-Security, choose the unknown suorces and open the file manager to find the corresponding APK;
(3). Click the application, then it appears Install and Cancel, click Install. Then it shows Application Installed, click Finished and then choose Done or Cancel the application.
Method 2: Installed steps of download Apps
(1). Through APK Installer, install the APK files, such as eoeMarket/Google Market;
(2). There is clarified Apps in the website, click any apps, it will appear Install and click it. Notification "Downloading→Downloaded→Installing→Application Installed"； then you can start the application or uninstall the application by clicking Uninstall.
(3). Enter into any websites to download apps;
Notice: The apps downloaded from the websites can only be saved in TF card.
There are many website to download the apps and the following websites is for reference:
http://www.eoemarket.com
http://www.apkok.com
http://www.ggdown.com/
http://www.mtxt800.com/

IV. CHARGE
1.Charge with Chargers
Notice: All the chargers should follow the following requirements and JXD will not be responsible for any damages caused by violation of the requirements.
Definition: Charger
Input: AC100-240V 50Hz/60Hz 0.5A
Output: DC5V ⎓2A
Connector Standard: MICRO USB Standard Connector

V. REBOOT
When meeting problems such as screen freezed or unoperable, you can press RESET to reboot the device and then the device can be operated again.

1. Thedevice cannot be started
·Check the battery capacity;
·Connect it to the adaptor and check it again;
·Please contact our service if the device cannot power on after charging.

2. No sound of the earphone
·Check if the volume is set as 0;
·Check the connection between the earphone and the device.

3. Serious noise
·Check if the earphone connecter is clean or not, dirts can result in noise;
·Check if the music files is broken or not and try the other music files. If the file is broken, it will lead to serious noise.

4. Can't download files
·Check if the connection is right or not;
·Check if the storage is full or not;
·Check if the USB Cable is broken or not.

Colors	Black front panel , White back panel
Materials and Crafts	Plastic, UV
Size	Length: 7.64inches Width: 4.85inches Depth: 0.39inch
Operate System	Android 4.0.4
Hardware Platform	MTK8377 Cortex A9 Dual core1.2GHz, 40nm, 512KB L2
Graphics Processing	GPU: PowerVR SGX531
DDR	LP DDR2 512M （Low Power Double Data Rate）
Nand flash	4GB, EMMC-FLASH (Embedded MultiMediaCard)
Screen	7.0-inch(diagonal) HD TFT Screen Resolution: 1024-by-600-pixel
Touch System	Five-point Capacitive Touch Screen
Extras	3 Axis Gravity Sensor, four directions to display automatically
Wireless	IEEE 802.11 b/g/n
Bluetooth	BT3.0HS+BT4.0LE
3G	WCDMA, GSM, GPRS, EDGE; HSPA (DL 7.1Mbps, UL 5.76Mbps) 3G: 850/2100 ; GSM: 850/900 1800/1900

GPS	Support
Vibration motor	Support
Speaker	Double Speakers
Endurance	Long for 6 hours
Camera	0.3M Front Camera, 2.0M Back Camera
I/O	3.5-mm stereo headphone mini jack USB : Micro USB 2.0 high spped 5PIN Micro TF Card Slot, Max 32GB SIM Card connector (Support both 3G and 2G SIM Card)
Multi-media	Support 720P and1080P video, support Adobe Flash
Picture	Support JPG, PNG, BMP, GIF, TIF etc.
E-book	Support PDF, TXT, CHM, DOC, Epub, RTF, FB2 etc.
Game Center	Support Android Gravity and Touch games
Applications	Support 500,000 applications free download
Languages	Support multi-languages
Operate Environment	Windows 98SE/ME; Windows2000; Windows XP or above

www.jxd.cc